
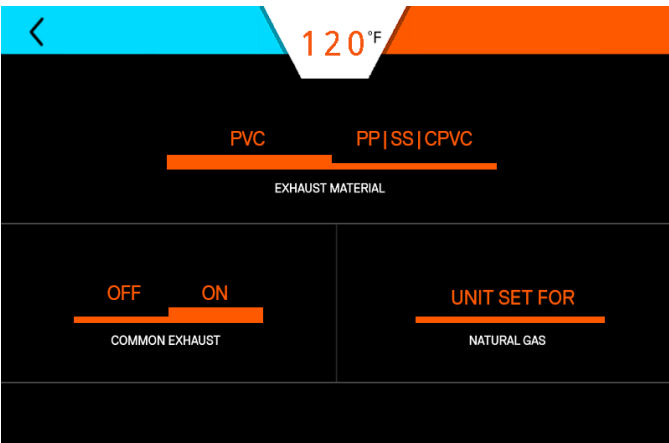
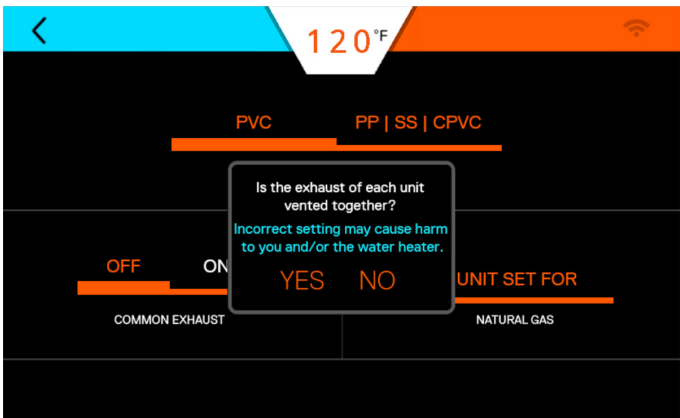


13.3 Venting for multiple units


When venting for multiple units the following screens will appear.

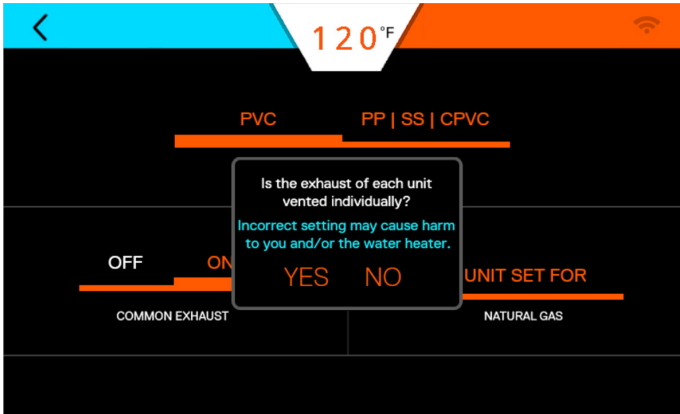

14. Maintenance


14.1 Maintenance-Free Circulation Pump

The circulation pump is maintenance-free and therefore does not require any servicing. The only adjustment is the speed setting, which must be set to Speed 3 (III).

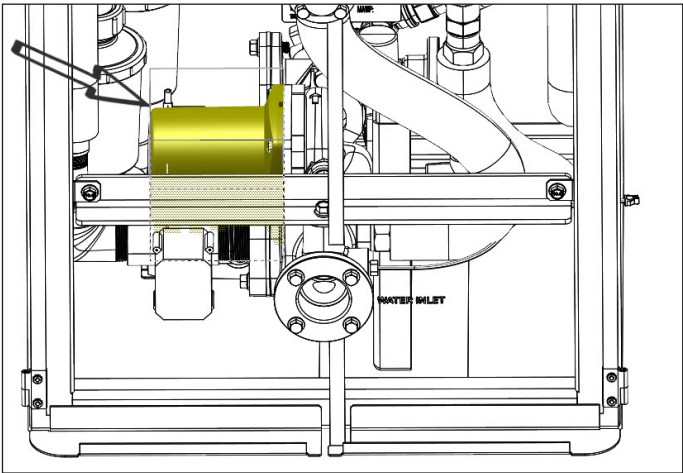

14.2 Heat Engine Locations


Use the following diagrams to identify the location of the heat engines.

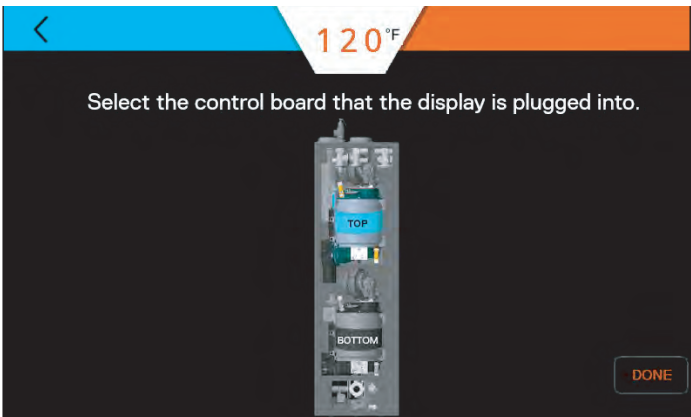


14.3 Condensate Sediment Cup Cleaning

14.3.1 Units with one condensate cup


One sediment cup is located inside the water heater cabinet. This cup should be removed and cleaned **every 3 months**.

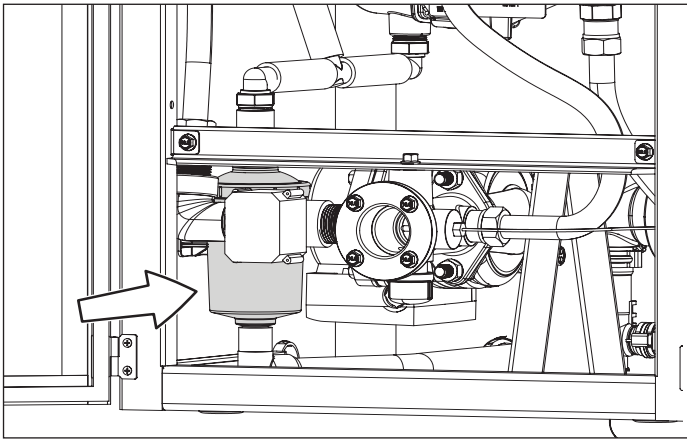


1. Twist the bottom of the sediment cup to release the locking clips.

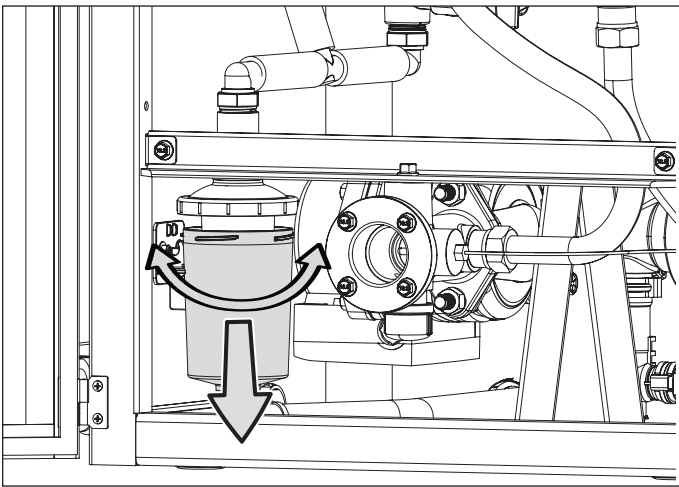

2. Pull down on the sediment cup and pull it away from the upper portion of the unit. The sediment cup will normally be full of condensate. Carefully, pour the condensate into a container and properly dispose of it.

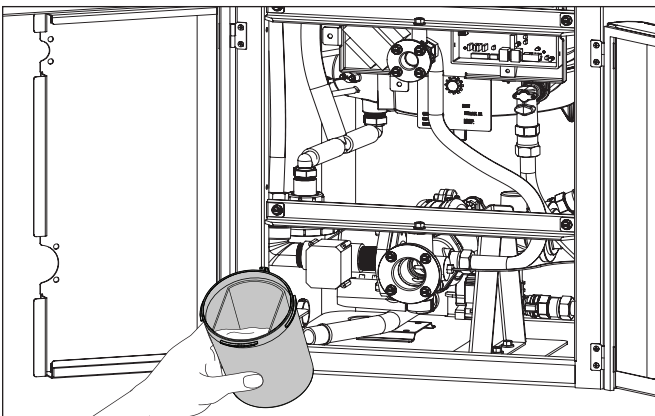


3. Remove the inner sediment cup from inside the lower portion of the unit.

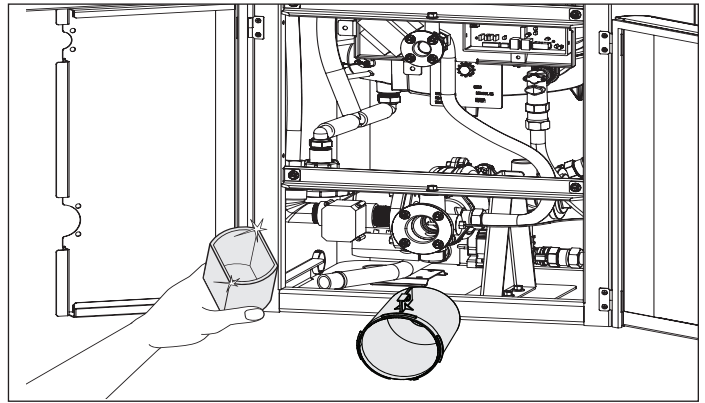

4. Remove any dirt and debris build-up using soap and warm water.
5. Replace the inner sediment cup and reattach the entire unit.

14.3.2 Units with two condensate cups

Two sediment cups are located inside the water heater cabinet (iN501=112024iN50179 or later; iN401=112124iN40186 or later). Both cups should be removed and cleaned **every 3 months**. Please follow the procedure for each cup as outlined in section 14.3.1.

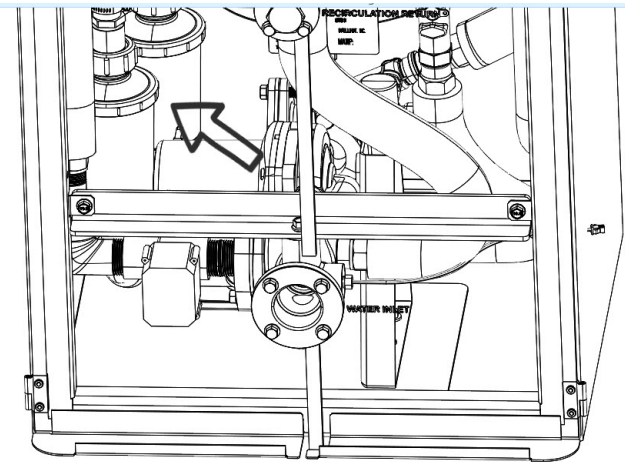

14.4 Wye Strainer

NOTICE

This heater includes an external Wye strainer. The Wye strainer must be installed to qualify for unit warranty.

1. Please clean the Wye strainer every **3 months**.