

THARK YOU FOR YOUR ORDER


NOTICE: Seller's warranty shall be void and of no effect if:

- 1. Licensed contractor is not used to install products.
- 2. Buyer uses the products in a manner not intended by Seller or in a manner not disclosed by Buyer; or
- 3. The breach resulted from the actions or omissions by another party or misuse of the products. For further questions or assistance feel free to reach out to our Customer Support team at: 877-835-1705



Diagram

ITEM	PART NUMBER	DESCRIPTION	QTY	NOTE
1	16T-ELC0167	LCD, 7" NEXTION ENHANCED NX8048K070	- 4	
2	IGT-ELC0293_VG01	ZIP TIE, PANEL MOUNT, 203 2MMLG (8")	1	
3	IGT-HRD0003	SCREW, PAN HD, PHILL, M4 X 0.70 X 8mm LG	12	-
4	1GT-HRD0141	WASHER, SELF-RETAINING M2 NYLON		
5	IGT-HRD0205	NUT, HEX, NYLON, M3		
6	IGT HRD0293	SPACER, NYLON 6mm X 3.2mm X 8mm LG	- 4	
7	IGT-LTH0004	LATCH, COMPRESSION, LOCKING, SOUTHCO		
8.	KAT-LTHOD50	HINGE, FREE, BLACK, ASSEMBLY	3	+-
9	(GT-SLS0131	SEAL, CLOSE-DEF, PLATE DISPLAY		
10	IGT-SM0680	DOOR, FRONT, FM. INDOOR, SUB-ASSEMBLY	8 4	
11	JGT-SM0688	DISPLAY, CLOSE-OFF, PLATE		

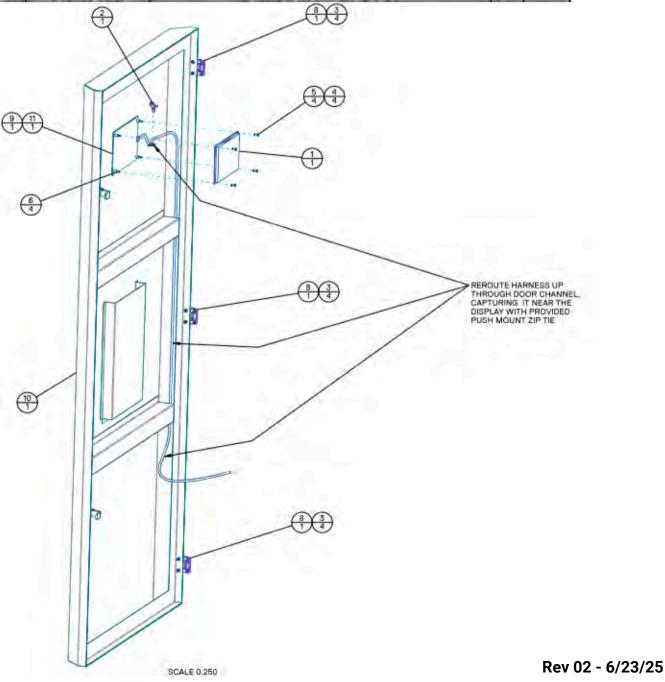



Tools Required

Other Information

Phillips Head Screwdriver



2.5 mm Allen Wrench



Zip Tie Clippers



5.5 mm Socket and Ratchet



This process requires a <u>second person</u> when installing the door.

Please do not try to complete this process alone, as it may lead to damage or personal injury.

If you experience any issues while completing this process, please reach out to Intellihot Technical Support:

Email: Support@intellihot.com Phone: 866-692-6791

Unit Model	Board/Display Color	Part Number
iQ751, iQ1001	Green/Black	SPR0112
iQ751, iQ1001	White/Orange	SPR0225
iQ1501	Green/Black	SPR0113
iQ1501	White/Orange	SPR0226



Steps to Remove Old Door

Unplug the display and cut the 4 zip ties that hold the display harness to the old door.



Remove the old hinge covers by pushing the



bottom of the hinge cover away.



Using a 2.5 mm Allen wrench, remove the screws that hold the hinges to the frame.



Remove the old door seals.







Steps to Install New Door

Inspect the metal door and the display received to ensure there is no shipping damage.


Peel off the covering on the new door seals and install them onto the frame.

If the door or display is received with any sort of shipping damage, please reach out to Intellihot Technical Support

> Intellihot Technical Support: Email: Support@intellihot.com Phone: 866-692-6791



While another person holds the metal door in place, install the hinges to the frame using a Phillips head screwdriver.









Steps to Install New Door

5

Using a 5.5 mm socket and ratchet, remove the 4 plastic screws and washers from the display mounting screws.



Insert the display onto the 4 mounting bolts for the display, and tighten down the 4 nuts by hand.





Do not overtighten these nuts as it can interfere with the responsiveness of the display


7

Route the display harness on to the metal door as shown below.



install the mounting zip tie on to the harness. Leave it a little bit loose.



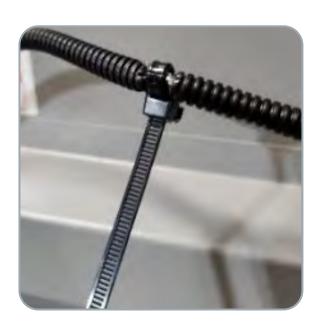



Steps to Install New Door

9


Insert the zip tie on to the mounting hole as shown.



Connect the display harness to the display port.

Adjust the harness so that it forms a smooth connection.



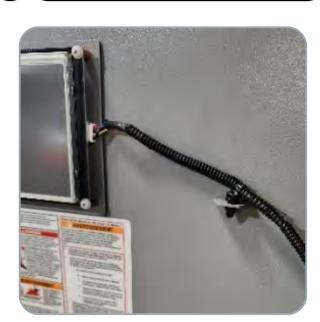

11 Tighten the zip tie and cut off the excess zip tie.

12

Turn ON the unit and perform touch operations on the display. If the display is not responsive, loosen the plastic nuts.



